Manualslib.com - The Global Manuals Library

Manuals / Brands / Sony Manuals / TV / K-75S30 / Reference manual / PDF

SONY K-75S30 REFERENCE MANUAL

SONY

Television

Reference Guide

参考指南

K-75S30 / 65S30 / 55S31H / 55S30 / 50S31H / 50S30 / 43S31H / 43S30

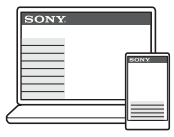

https://rd1.sony.net/help/tv/lga2/h_ga/

5-057-926-**11**(1)

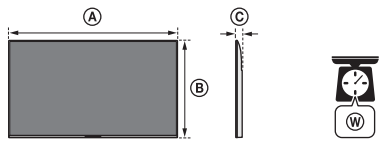

	(mm/毫米)*1			(kg/千克)*1
	Ⓐ	Ⓑ	Ⓒ	Ⓦ
K-75S30	1 675	962	73	30.7
K-65S30	1 452	836	72	20.7
K-55S31H / 55S30	1 233	713	72	15.4
K-50S31H / 50S30	1 119	649	70	12
K-43S31H / 43S30	964	563	69	9.9

*1 (Approx. / 大約)

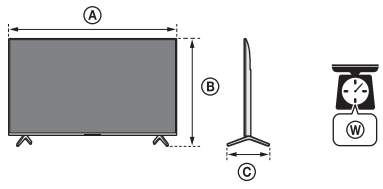

	(mm/毫米)*1			(kg/千克)*1
	Ⓐ	Ⓑ	Ⓒ	Ⓦ
K-75S30	1 675	1 042	410	32
K-65S30	1 452	909	334	21
K-55S31H / 55S30	1 233	784	334	15.7
K-50S31H / 50S30	1 119	714	267	12.2
K-43S31H / 43S30	964	629	266	10.1

*1 (Approx. / 大約)

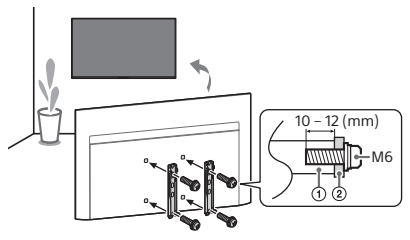

① Wall-Mount Attachment VS / 壁掛連接件 VS

② Wall-Mount Bracket / 壁掛式支架

(mm) / (毫米)

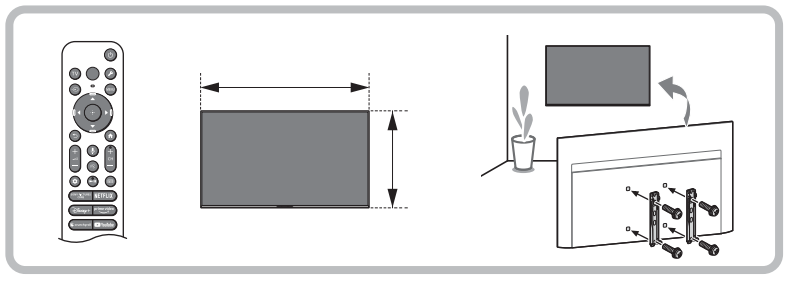

© 2024 Sony Corporation

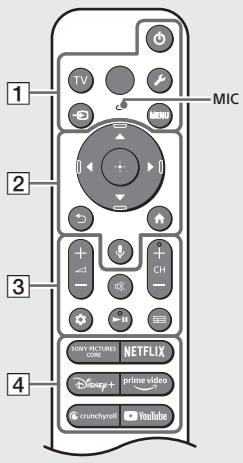

EN

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/ TV settings.

1 ⏻ **(Power)**
TV: Display TV channel list or switch to input.
(Quick settings): Display Quick Settings.
(Input select): Display and select the input source, etc.
MENU **(Control menu):** Display the Control menu.

2 ▲ / ▼ / ◀ / ▶ / ⊕: On screen menu navigation and selection.
(Back)
(Home)
(Google Assistant / Microphone): Use Google Assistant*1*2 or voice search*2.

3 + / – **(Volume)**
(Mute)*3
CH + / – (Channel)
(Dashboard): Display Dashboard.
⏯
(Guide): Display the digital programme guide.

4 **App buttons**

*1 Only for limited region/country/model/language.
*2 Google Assistant or voice search requires an Internet connection.
*3 Accessibility shortcut is available by pressing and holding (Mute).

CT

遙控器外形、按鈕的佈局、可用性與功能視您的國家/區域/電視機型號或設定而可能略有不同。

1 ⏻ **（電源）**
TV： 顯示電視機頻道清單或切換為輸入。
（快速設定）： 顯示快速設定。
（輸入選擇）： 顯示並選擇輸入來源等。
MENU **（控制選單）：** 顯示控制選單。

2 ▲ / ▼ / ◀ / ▶ / ⊕：在螢幕選單導航和選擇上。
（返回）
（主選單）
（Google 助理 / 麥克風）： 使用 Google 助理*1*2 或語音搜尋*2。

3 + / –**（音量）**
（靜音）*3
CH + / –（頻道）
（資訊主頁）： 顯示資訊主頁。
⏯
（指南）： 顯示數位節目指南。

4 **應用按鈕**

*1 僅限用於有限區域 / 國家 / 型號 / 語言。
*2 使用 Google 助理或語音搜尋需要網際網路連線。
*3 按住 （靜音）可使用輔助使用快捷鍵。

EN

About Manuals
Please retain the manuals for future reference.

Paper manual
Setup Guide (on top of the product) / Reference Guide (this manual) / Safety and Other Information.

Help Guide (On screen Manual)
- To open it, select [Settings] → [Help and feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].
- You can refer to the Help Guide with your smartphone (visit website provided on the front cover of Reference Guide).

Read and understand the contents of this manual before operating this product.

Note
- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Read the supplied safety documentation for additional safety information.
- Images and illustrations used in the supplied manuals are for reference and may differ from the actual product.
- Setting menus are subject to change without notice due to software updates. For latest information, visit Sony support website.

IMPORTANT - Read the End User Software Licence Agreement before using your Sony product. Using your product indicates your acceptance of the End User Software Licence Agreement. The software licence agreement between you and Sony is available online at Sony website (https://www.sony.net/tv-software-licenses4/) or on your product screen. Press (Quick Settings) on the remote control and select [Settings] → [System] → [About] → [Legal information] → [Notices and licences].

Location of the identification label
Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

This television is designed for use in Hong Kong and ensured the usage in Hong Kong only.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (SU-WL850 or SU-WL450)*1 (not supplied)

To Customers:
For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:
Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information
For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the product page for your TV model.
https://www.sony-asia.com/support
- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Sony is not liable for any damage or injury caused by mishandling or improper installation.
- Only qualified service personnel should carry out wall-mount installations.
- For safety reasons, it is strongly recommended that you use Sony accessories, including:
  — Wall-Mount Bracket SU-WL850
  — Wall-Mount Bracket SU-WL450
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket.
  The diameter and length of the screws differ depending on the Wall-Mount Bracket model.
  Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.
- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

*1 Only for limited region/country/model.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

1 Restart your TV by pressing the power button on the remote control for about five seconds. Select [Restart] and TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead).
Or, press the power button on the TV for about 40 seconds until the TV turns off.
2 Refer to the Help menu shown below.
3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
4 Visit Sony support website (information provided at the end of the supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.
It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.
- Replace the batteries.

The parental lock password has been forgotten.
- Enter 4357 for the PIN and enter the new PIN.

For more information, refer to the Help Guide.
To open it, select [Settings] → [Help and feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].

Specifications

System
Panel system
LCD (Liquid Crystal Display) Panel, LED Backlight
TV system
Analogue: I
Digital: DTMB
Colour system
PAL/SECAM/NTSC3.58/NTSC4.43
Channel coverage
Analogue: UHF/VHF/Cable
Digital: UHF
Sound output (W)
10 + 10
Wireless technology
Protocol IEEE 802.11a/b/g/n/ac/ax
Bluetooth® Version 5.3

Input/Output jacks
Antenna (aerial)/cable
75 ohm external terminal for RF input
HDMI IN 1/2/3/4 (HDMI IN 3 eARC/ARC)
DIGITAL AUDIO OUT (OPTICAL)
Two channel linear PCM: 48 kHz 16 bits, Dolby Audio
USB 1/2
USB 1 (USB 2.0, 500 mA), USB 2 (USB 3.2 Gen 1, 900 mA)
LAN (10BASE-T/100BASE-TX)

Power and others
Power requirements
220 V – 240 V AC, 50 Hz
Screen size (measured diagonally) (Approx.) (inches/cm)
K-75S30: 75 / 189.3
K-65S30: 65 / 163.9
K-55S31H / 55S30: 55 / 138.8
K-50S31H / 50S30: 50 / 125.7
K-43S31H / 43S30: 43 / 108.0
Power consumption
Indicated on the rear of the TV
Standby power consumption*1*2 (W)
0.5
Display resolution (horizontal × vertical) (pixels)
3 840 × 2 160
Output rating
500 mA (for USB 1), 900 mA (for USB 2)

Others
Operating temperature
0 °C – 40 °C
Operating humidity
10 % – 80 % RH (non-condensing)
Optional accessories
Wall-Mount Bracket: SU-WL850 (K-75S30 / 65S30 / 55S31H / 55S30 only), SU-WL450

*1 Specified standby power is reached after the TV finishes necessary internal processes.
*2 Standby power consumption will increase when your TV is connected to the network.

Note
- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.
- Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.
- Power consumption will increase when the built-in MIC is enabled as it is always listening.
- Visit Sony website for more information on product specifications.

Trademark Information
- Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.

其他
作業溫度
0 °C – 40 °C
操作濕度
10 % – 80 % 相對濕度（非冷凝）
選用的配件
壁掛式支架：SU-WL850（僅限 K-75S30 / 65S30 / 55S31H / 55S30），SU-WL450

*1 電視機完成所需的內部處理后，達到規定的待機功率。
*2 當您的電視機連接至網絡時，待機耗電量將有所增加。

註
- 選購配件的供應視國家/區域/電視機型號/存貨而定。
- 設計與規格可能變更而不事先通知。
- 使用 Google 助理時，可能需要訂購服務和應用程式，並可能新增適用的條款、條件和/或費用。
- 內建麥克風啟用，一直在聆聽時，耗電量會增加。
- 請造訪 Sony 網站以獲取更多有關產品規格的更多資訊。

商標資訊
- Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.
- TUXERA 是 Tuxera Inc. 在美國及其他國家/地區的註冊商標。

CT

關於說明書

請保管好這些說明書，以供日後參考。

紙質說明書
安裝指南（產品上方）/參考指南（本說明書）/安全與其他資訊。

說明指南（電子說明書）
- 想要打開說明指南，請選擇［設定］→［說明與意見反映］→［說明］或在主選單中選擇［說明］，如果［說明］不存在，請選擇［查看全部］→［說明］。
- 您可以使用您的智能手機來查閱說明指南（請訪問參考指南封面提供的網站）。

操作本產品之前，請先閱讀並理解本說明書的內容。

註
- 有關“將電視機安裝在牆上”的指示已包含在這台電視機的使用說明書。
- 有關其他安全資訊，請閱讀隨附的安全檔案。
- 隨附的說明書中使用的影像和插圖供參考之用並可能與實際產品不同。
- 由於軟件更新，設定選單可能變更恕不另行通知。有關最新資訊，請造訪 Sony 支援網站。

重要 – 在使用 Sony 產品之前，請先閱讀終端使用者軟體授權合約。若使用您的產品，則表示您接受終端使用者軟體授權合約。您與 Sony 之間的軟體授權合約可在 Sony 網站（https://www.sony.net/tv-software-licenses4/）上線上獲取，也可在您產品的螢幕上獲取。按遙控器上的 🔧（快速設定），選擇［設定］→［系統］→［關於］→［法律資訊］→［注意事項和授權］。

識別標籤的位置
電視機型號和電源等級的標籤位於電視機背面。

本電視設計在香港使用，只保證能在香港使用。

將電視機安裝在牆上

使用選購的壁掛式支架（SU-WL850 或 SU-WL450）*1（非附帶）

致客戶：
出於產品保護及安全原因，Sony 強烈建議由 Sony 經銷商或授權的承包商安裝電視機。請勿嘗試自行安裝電視機。

致 Sony 經銷商和承包商：
安裝、定期維護及檢查本產品時，請充分注意安全。

壁掛式支架安裝資訊
有關壁掛式支架安裝的說明，請參閱您的電視機型號的產品頁上的安裝訊息（壁掛式支架）。
https://www.sony-asia.com/support
- 請遵循適合您的型號的壁掛式支架隨附的使用說明手冊。安裝本電視機須具備充足的專業知識，確定牆壁是否能夠承受電視重量時尤為如此。
- 對於因錯誤操作或安裝不當引致的任何損害，Sony 概不負責。
- 僅可由合格的維修人員執行掛壁安裝。
- 為了安全起見，強烈建議您使用 Sony 配件，包括：
  — 壁掛式支架 SU-WL850
  — 壁掛式支架 SU-WL450
- 將壁掛式支架安裝於電視機上時，務必要使用隨附於壁掛式支架的螺絲。隨附螺絲如插圖所示設計從壁掛式支架安裝表面量起。
  螺絲的直徑和長度會因為壁掛式支架的型號而有所不同。
  使用隨附螺絲以外的螺絲可能會造成電視機內部損壞或者掉落等等。
- 務必將未使用的螺絲及桌面底座存放於安全位置，直到您已準備好連接桌面底座。請將螺絲存放在兒童接觸不到的位置。

*1 僅限用於有限區域 / 國家 / 型號。

故障排除

以下問題的一般故障排除：黑螢幕、沒有聲音、凍結畫面、電視機沒有反應或網絡丟失，請依照以下步驟操作。

1 按遙控器上的電源按鈕大約五秒重新啟動電視機。選擇［重新啟動］，電視將重新啟動。如果電視機未恢復正常，請嘗試拔下 AC 電源線，然後按電視機上的電源按鈕再鬆開此按鈕。等候兩分鐘，隨後插入 AC 電源線。
或者按電視機上的電源按鈕約四十秒，直到電視機關閉。

2 請參閱如下所示的說明選單。

3 將電視機連接至網路，然後執行軟件更新。Sony 建議您不斷更新您的電視機軟件。軟件更新將提供新功能和效能改善。

4 造訪 Sony 支援網站（提供的資訊在隨附安全文檔末尾）。

在插入電視機時，即使按遙控器或電視機上的電源按鈕，電視機也可能在一定時間不能開啟。
系統初始化需要一定時間。等待大約一分鐘，然後再次操作。

遙控器無效。
- 更換電池。

忘記家長鎖定的密碼。
- PIN 碼輸入 4357，然後輸入新的 PIN 碼。

有關更多資訊，請參閱說明指南。
想要打開說明指南，請選擇［設定］→［說明與意見反映］→［說明］或在主選單中選擇［說明］，如果［說明］不存在，請選擇［查看全部］→［說明］。

規格

系統
面板系統
LCD（液晶顯示）面板，LED 背光源
電視系統
模擬：I
數位：DTMB
彩色系統
PAL/SECAM/NTSC3.58/NTSC4.43
頻道涵蓋範圍
模擬：UHF/VHF/纜線
數位：UHF
聲音輸出（瓦）
10 + 10
無線技術
IEEE 802.11a/b/g/n/ac/ax 協議
藍牙® 版本 5.3

輸入/輸出插孔
天線/纜線
用於 RF 輸入的 75 歐姆外部端子
HDMI IN 1/2/3/4（HDMI IN 3 eARC/ARC）
DIGITAL AUDIO OUT（OPTICAL）
兩聲道線性 PCM：48 kHz 16 位元，Dolby Audio
USB 1/2
USB 1（USB 2.0，500 mA），USB 2（USB 3.2 Gen 1，900 mA）
LAN（10BASE-T/100BASE-TX）

電源和其他規格
電源需求
220 V – 240 V AC，50 Hz
螢幕尺寸（對角測量）（大約）（英寸/厘米）
K-75S30：75 / 189.3
K-65S30：65 / 163.9
K-55S31H / 55S30：55 / 138.8
K-50S31H / 50S30：50 / 125.7
K-43S31H / 43S30：43 / 108.0
耗電量
見電視機背面
待機耗電量*1*2（瓦）
0.5
顯示解析度（水平 × 垂直）（畫素）
3 840 × 2 160
輸出率
500 mA（對於 USB 1），900 mA（對於 USB 2）

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages